


Manual ClickFit EVO Trusshook

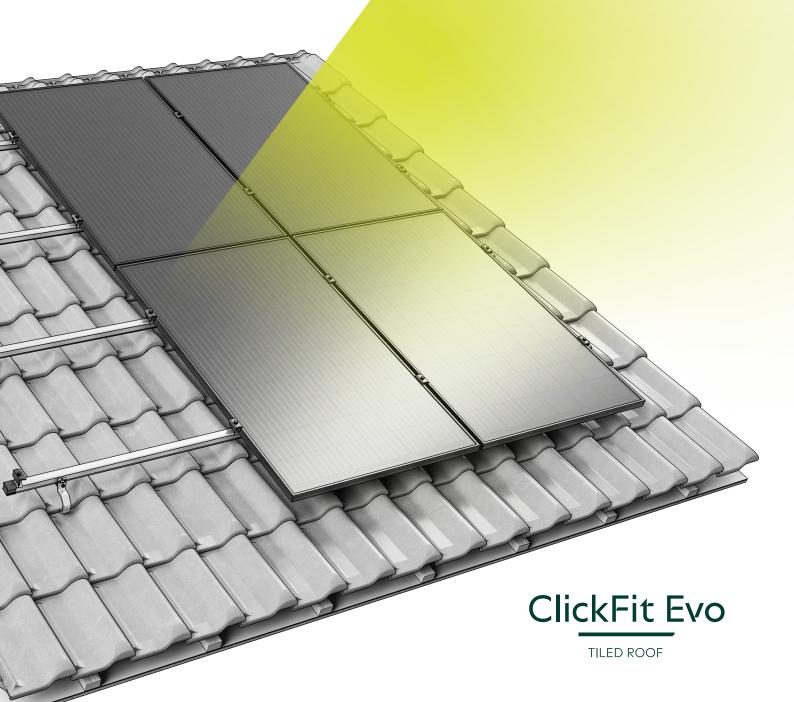

CONTENTS

	page
1. Introduction	1
2. General installation conditions	1
3. Product description	3
4. Parts overview	3
4.1 Exploded-view mounting system in portrait layout	3
4.2 Exploded-view mounting system in landscape layout	4
4.3 Trusshook for portrait or landscape layout	4
4.4 Parts list	5
5. Mounting preparation	5
5.1 Checking tools and accessories	5
5.2 Cleaning the roof	6
5.3 Determining and measuring the position of the solar panels	7
6. Installation of mounting system in portrait layout	8
6.1 Pre-mounting the mounting rail connector	8
6.2 Fastening trusshooks	9
6.3 Fastening the mounting rail	10
6.4 Mounting Clickfit EVO MLPE clip Light or Heavy Weight (option)	11
6.5 Mounting the 1st solar panel on the rails	12
6.6 Mounting other solar panels on the rails	13
6.7 Completing the mounting of the 1st row of solar panels	14
6.8 Completing the mounting of several rows under each other	15
7. Installation of mounting system in landscape layout	16
7.1 Pre-mounting the mounting rail connector	16
7.2 Fastening trusshooks	17
7.3 Fastening the mounting rail	18
7.4 Mounting Clickfit EVO MLPE clip Light or Heavy Weight (option)	19
7.5 Mounting the 1st solar panel on the rails	20
7.6 Mounting other solar panels on then rails	21
7.7 Completing the mounting of the 1st row of solar panel above each other	22
7.8 Completing the mounting of several rows next to each other	23
8. Appendix 1 - Clickfit EVO Standard	24
8.1 Specifications for installation	24
8.2 Tightening moments	25
9. Appendix 2 - Clickfit EVO 60 mm Clamp	26
9.1 Parts overview	26
9.2 Mounting of solar panels in the portrait set-up with 60 mm Clamp	28
9.3 Mounting of solar panels in the landscape set-up with 60 mm Clamp	37

PLEASE SAVE THIS INSTALLATION MANUAL CAREFULLY FOR FUTURE USE!

We recommend that you contact your supplier for the duration and conditions relating to guarantees. We also refer you to our General Terms and Conditions of Sale and Delivery, which can be found on the website eu.enstall.com.

The manufacturer rejects all responsibility for damage or injuries caused by failure to meticulously follow this mounting manual and failure to exercise the usual caution during the transportation, mounting and use of the ClickFit Evo mounting system with trusshook. As a consequence of constant efforts to improve it may occur that a detail of the product deviates from what is described in this manual. For this reason, the instructions given serve only as a guideline for the installation of the product specified in this manual. This manual was created with great care, but the manufacturer cannot accept responsibility for any errors in this manual or their consequences. All rights are reserved and nothing in this manual may be copied in any manner whatsoever.

1. Introduction

This manual describes the installation of the ClickFit Evo mounting system with trusshook on a pitched roof with roof tiles for solar panels in portrait and landscape layout. Optionally, the ClickFit Evo mounting system can be installed with the 60 mm Clamp, for this you will find the instructions in Chapter 9. Appendix 2 - Clickfit EVO 60 mm Clamp.

Read the manual carefully so that you are aware of its entire contents. Follow the instructions in the manual meticulously. Always execute the actions in the correct sequence.

Keep the manual in a safe and dry place. If the manual is lost, a new copy can be downloaded from eu.enstall.com.

2. General installation conditions

General

Failure to comply with the instructions in this document can result in the nullification of all guarantee and product liability claims.

The information, comments and recommendations in this document are binding and must be checked for completeness and current relevancy. Enstall reserves the right to alter this document without further announcement.

Stability and condition of the roof

The roof must be in good condition and sufficiently strong to bear the weight of the solar panels and the additional materials, wind and snow loads. Check the stability of the roof and alter the roof/construction where necessary. If in doubt, use a construction firm. Ensure that the load reserve of the roof is not exceeded either completely or at specific points.

Safety warnings

- Mounting the ClickFit Evo mounting system must always be executed by qualified technical personnel (minimum of 2 professionally qualified persons).
- The addition or omission of parts can have a detrimental effect on the function and is advised against in the strongest terms!
- The roof must be clean, dry, even and free of algae, etc. for placement of the solar panels.
- Avoid mounting if there is a strong wind and a wet roof surface.
- Always work on a pitched roof with a safety harness and safety nets and edge safety if necessary.
- Slide roof tiles upwards so that gaps are created in which you can place your feet. Attention!: Never stand in the gutter.
- Never walk on the system or on the solar panels.
- Wear shoes with reinforced toecaps and strong anti-slip soles.
- Always wear the correct protective clothing when executing the work.
- Always use a lifting/hoisting installation when moving the material (solar panels, etc.).
- Always place a ladder on a strong and stable surface.
- Always place the ladder at an angle of approximately 75° and allow it to protrude above the edge of the roof.
- If possible, secure the top of the ladder with a rope or tensioning strap.
- Preferably work in accordance with the "working safely on roofs" manual.
- Attention: The trusshook must be placed against the roof batten!

Range of application ClickFit Evo

- The maximum allowable wind load etc can be determined by the ClickFit EVO calculator in compliance with MIS 3002.
 The ClickFit EVO calculator can be found on our website my.enstall.com or can be requested trough customer support.
- Panel dimensions: maximum solar panel size of 3.92 m².
- The universal module clamp is suitable for solar panels with a frame thickness between 30 50 mm and a frame width of at least 12 mm, where a sufficient clamping force can be achieved. Thanks to its smart design, the ClickFit Evo universal clamp can be used as a middle clamp and as an end clamp (in combination with the end cap). Check whether the chosen solar panel can withstand the loads and clamping force, in the documentation of the solar panel supplier.
- Range of adjustable trusshook (tiling batten thickness + roof tile thickness): 37 62mm
- The minimum dilatation distance between the segments is 125 mm.
- Maximum roof height: dependent on Eurocode guidelines and national additions. Use the calculator to calculate the possibilities for your project.
- Type roof covering: Sloping roof with roof tiles.
- Roof pitch: Between 10 60 degrees. Note: with a roof pitch lower than 20 degrees, check the specifications of the roof tile supplier.
 With a roof pitch of less than 20 degrees it is often necessary to take additional water-retaining measures, such as applying water-retaining foil under the roof tiles or grinding the roof tile at the hook.
- Use the calculator to ensure you select the right mounting system for the terrain category, snow load and wind zone applicable to your project.

Edge zone

The distance from the solar panels to the roof ridge and the gutter must be a minimum of 30 cm, in consideration of the wind load. The distance from the solar panels to the side of the roof must be a minimum of 30 cm. Solar panels may not be placed here either completely or partially.

Standards, prescriptions and regulations

During the installation of the mounting system, it is important to adhere to the installation manual and the accompanying standards to prevent accidents. Pay special attention to (local) standards, regulations and legislation (among others):

- The Building Regulations 2010 (latest version)
- Health and Safety at Work etc Act 1974
- · Health and Safety in Roof work HSE
- Eurocodes 0 (EN 1990 Structural Design)
- Eurocodes 1 (EN 1991 (Influences on structures)
- HD-IEC 60364 series Electrical installations for low voltage
- EN-IEC 62305-2 Protection lightning Risk Management
- MIS 3002 The solar PV standard
- MCS012 Product Certification Scheme Requirements: Pitched Roof Installation Kits



Removal and disassembly

Dispose of the product in compliance with local laws and regulations.

Earthing and bonding

Our ClickFit EVO systems are VDE certified for corrosion and bonding. According to the electrical standard HD-IEC 60364 – chapter 712, functional bonding for inverter's isolation check is necessary.

In the Enstall ClickFit EVO Series functional bonding is achieved through the EVO universal module clamp for the module frames and EVO rails. The final functional bonding connection is made by proper mounting of a separate bonding cable onto the EVO rail and an adequate bonding connection with the inverter or earthing contact.

For detailed instructions on grounding and bonding, consult the electrical standard HD-IEC 60364 and any local regulations. Please, follow the instructions of the inverter's manual. This operation needs to be done by a certified electrician.

Warranty

Warranty according to the terms and conditions of Enstall. These can be found on the website eu.enstall.com.

Maintenance

The ClickFit EVO system is designed to be virtually maintenance-free. A few points need to be checked to ensure structural integrity and the function of the system.

The following points need to be checked on a yearly basis and after each storm with wind speeds >9Bft.:

- The reliability of all bolt, nuts, screw and clamp connections.
- o Action: Tighten all bolts, nuts, screws and clamps where necessary according to the installation manual and report it to Enstall including photographs.
- Overall visual control of ClickFit EVO system (corrosion of components, etc).
- o Action: Report it to Enstall including photographs.

Liability

The manufacturer accepts no liability for damage or injury caused by not (strictly) adhering to the safety prescription and instructions contained in this manual, or by carelessness during installation of the product specified in this document and the eventual related accessories.

· Printing errors reserved

3. Product description

The ClickFit Evo mounting system consists of the patented adjustable trusshooks, mounting rails and the mounting materials necessary to mount the solar panels on a tiled roof in portrait or landscape layout. The trusshook has a rotatable click bracket that enables the mounting rails to be clicked onto the trusshook both horizontally and vertically. The ClickFit Evo mounting system for tiled roofs can be used for all roof tiles, regardless of their type.

Roof fastening

The universal roofing tiles are fastened to the roof battens with a minimum of 2 teller head screws. Every trusshook has 9 mounting holes, which makes the position of the trusshook on the roof batten laterally adjustable. Differences in height in the roof can easily be bridged with the aid of the adjustable trusshook.

Fastening the MLPE Light and Heavy Weight clips

The MLPE Light and MLPE Heavy Weight clip is fastened to the mounting rails by means of a click connection.

Fastening the mounting rail

The mounting rail is fastened to the trusshooks by means of a click connection. No further materials or tools are required for this.


Fastening the panels

The solar panels are fastened to the mounting rails with the aid of the universal module clamps.


Optionally, the solar panels can be attached to the mounting rails using 60 mm End and Mid clamps. (See 9. Appendix 2 - Clickfit EVO 60 mm Clamp for the installation of the 60 mm Clamps).

4. Parts overview

4.1 Exploded-view mounting system in portrait layout

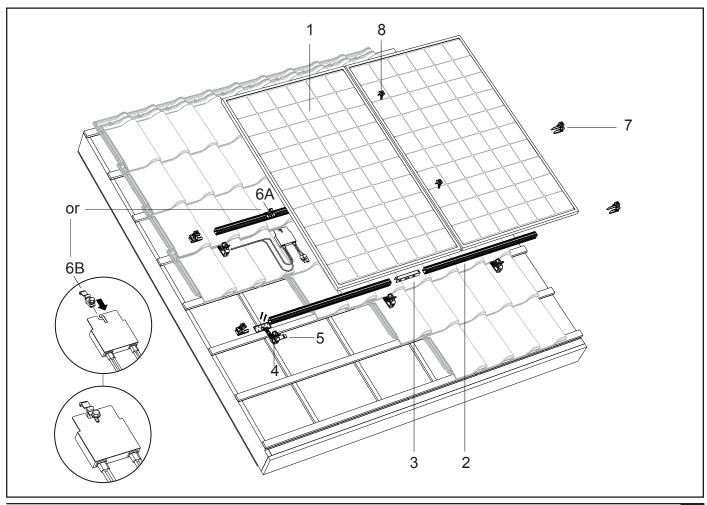


4.2 Exploded-view mounting system in landscape layout

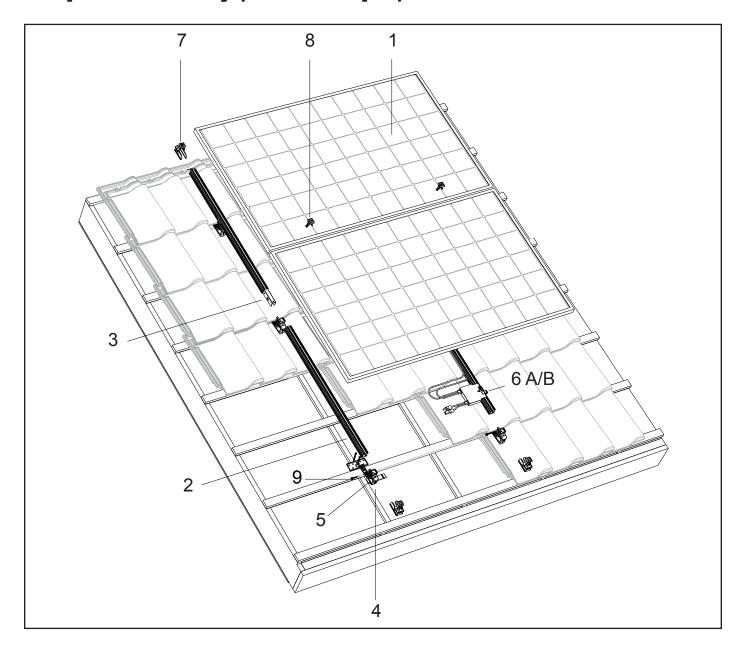


4.3 Trusshook for portrait or landscape layout

The trusshook has rotatable click bracket so that the mounting rail can be clicked onto the trusshook both vertically and horizontally. This allows the trusshook to be applied for both portrait and landscape layouts.

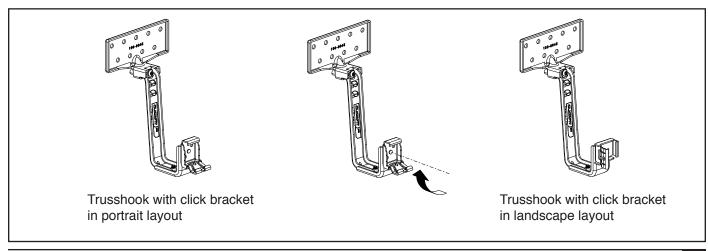

4.4 Parts list

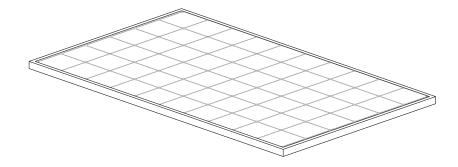

1. Solar panel



2. ClickFit Evo Mounting rail
Article no: 100800_ and 10081__



3. ClickFit Evo Mounting rail connector Article no: 1008061



4. ClickFit Evo trusshook Article no: 1008045



ClickFit Evo EPDM roof hook spacer Article no: 1008063



6A. Clickfit EVO MLPE clip Light Weight Article no: 1008067



6B. Clickfit EVO MLPE clip Heavy Weight Article no: 1008068



7. ClickFit Evo Mounting rail end cap grey Article no: 1008060

7B. ClickFit Evo Mounting rail end cap black Article no: 1008060-B



8. ClickFit Evo Universal module clamp grey Article no: 1008020

8B.ClickFit Evo Universal module clamp black Article no: 1008020-B




 Self-drilling screw 6.3x42mm SW10/T30 Article no: 1003016 (for landscape)

5. Mounting preparation


5.1 Checking tools and accessories

Here is a list of the tools/aids required:


Marker / chalk

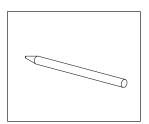

Brush

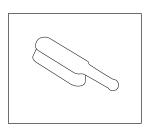


Tape measure

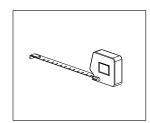


Battery-powered screwing drill




Hexagon socket ratchet Metal saw

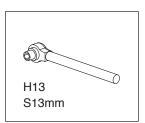


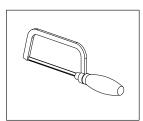


Safety gloves

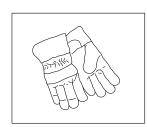


Safety helmet

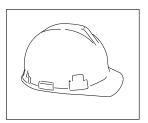


Safety glasses

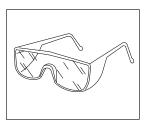


Safety clothes

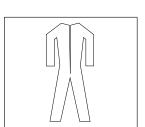

Safety shoes

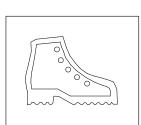

Dust mask

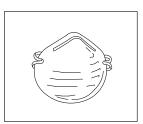

Hearing protection




Scaffold or stable, safe ladder

5.2 Cleaning the roof

Clean the roof tiles on the pitched roof with a brush.

Remove algae, moss, etc. to limit unevenness to a minimum during the installation!

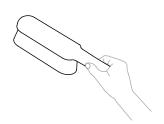

5.3 Determining and measuring the position of the solar panels

Take into account the (local) fire regulations for photovoltaic installations. To reduce the risk of fire spread, the fire compartments of the object must be respected. The PV system must not be installed over fire partitions and a minimum distance of 30 cm must be maintained. It is also wise to keep space in relation to skylights, orbs, corners and possible fire hazards.

When determining the position of the solar panels on the pitched roof it is very important to pay attention to the amount of sunlight received during the entire day and during the entire year. Place the panels on a roof surface that is not shaded. The shadows of a chimney, dormer window, trees and nearby buildings have a detrimental effect on the yield of the solar panels.

Measuring and marking


Ensure that a minimum of 30 cm is kept free all around the solar panels on the roof. This means 30 cm from the roof ridge and the gutter, and 30 cm from the sides in connection with turbulent wind loads.

Mark the contours of the panel field on the tiles with a marker pen or chalk.

Marking mounting rails and trusshooks for portrait layout:


Mark the position of the mounting rails: on 1/4 of the top and bottom edges of the panel.

Now mark where the trusshooks must be placed. The trusshook distance depends on several variables (wind load, building height, location, condition of the roof, etc.). Follow the instructions given by the calculator with regard to the gaps between each trusshook. They are an important guide. The maximum lateral gap is 1.20 m.

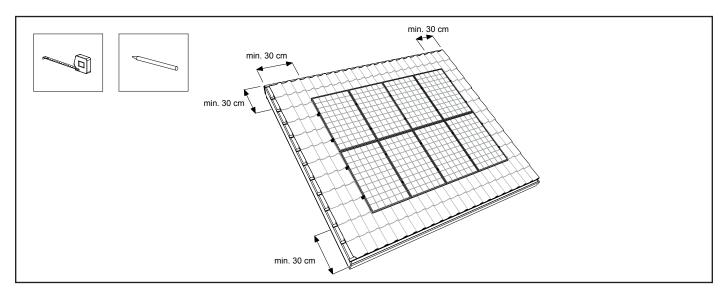

Marking mounting rails and trusshooks for landscape layout:

Mark the lines for the mounting rail placement: on 1/4 of the panel side edges. Now mark where the trusshooks must be placed.

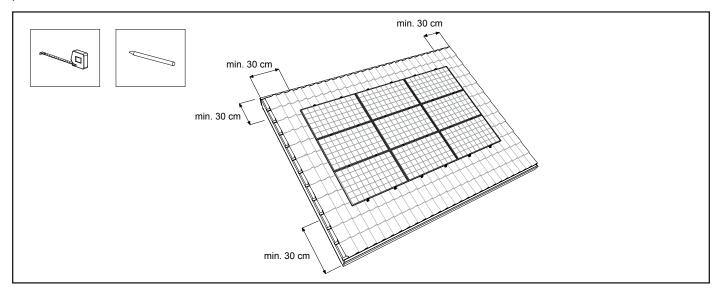


6. Installation of mounting system in portrait layout

6.1 Pre-mounting the mounting rail connector

First determine the rail length required for the row of solar panels.

You can connect the mounting rails to each other with mounting rail connectors. There are small clamps with teeth on the mounting rail connector that grip the inside of the rail.

Slide the connector into the ends of the mounting rail. Slide the connector to the centre of the middle stud of the connector. Connect the number of rails to each other until the total required rail length is reached.

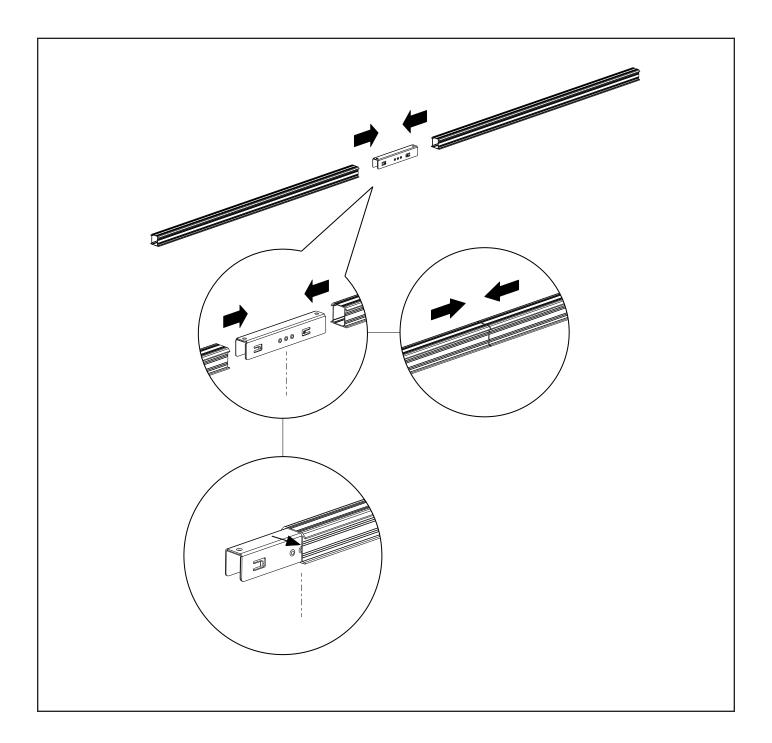


6.2 Fastening trusshooks

- 1. Slide the tile above the trusshook upwards, under the tile on top of it. Place the mounting flange of the trusshook on the roof batten, ensure that it connects correctly and pull the trusshook against the tile. Place the trusshook in the concave part (dip) of the underlying tile. The top adjustable part of the trusshook is a minimum of 37 mm and a maximum of 62 mm.
- 2. Fasten the trusshook with a minimum of 2 teller head screws 6x50/60 to the roof batten. **Attention!** These screws are not supplied.
- 3. Tighten the torx screw on the top of the trusshook firmly with a cordless screwdriver. **Attention!** The tightening moment of the screw connection is 1 1.5 Nm.
- 4. Slide the tile above the trusshook down again. With some roof tiles the top tile must be adapted to the trusshook with an angle grinder or a file so that the tiles close correctly again. *
- 5. Follow the instructions given by the calculator with regard to the gaps between each trusshook. They are an important guide. The maximum lateral gap is 1.20 m. Divide the number of trusshooks produced by the calculation over possible roof battens, with a maximum span of 1.20 m. Ensure that the trusshooks are aligned with each other.
- **Attention! When needed, rail spacing can be extended to the previous or next tile, crest or seam, up to 400 mm beyond the recommended distance. Enstall recommends to always respect the module manufacturers' rail spacing and clamping specifications.


*Option: For tiles with a high water retaining edge, the filling rubber can be placed under the trusshook so that it rests neatly on the tile. Fold the rubber to produce the desired thickness. The filling steps are 5,10 and 15 mm.

Attention! Ensure that the click bracket on every trusshook is in the correct position so that the mounting rail can be fastened to the trusshook horizontally (see chapter 4.3).

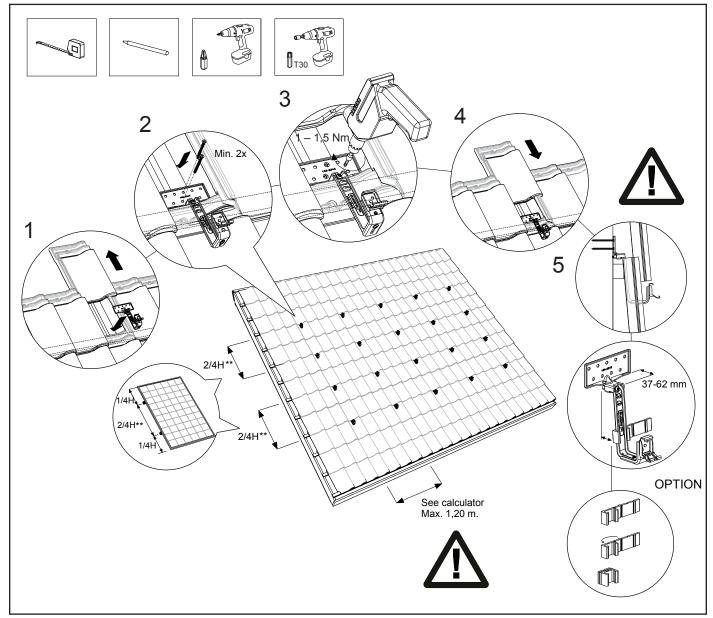

6.3 Fastening the mounting rail

- 1. Place the mounting rail in the installed trusshooks.
- 2. Ensure that the end of the mounting rail protrudes 90 350 mm from the last trusshook.
- 3. Now click the mounting rail onto the trusshooks. Ensure that it clicks on firmly.
- 4. Ensure that the mounting rail and the trusshooks are correctly aligned with each other and the mounting rail is positioned correctly on the trusshook. Ensure that the mounting rails are directly above each other in connection with the alignment of the solar panels!
- 5. The mounting rails can be aligned if necessary by means of the height adjustment on the trusshook. Slightly unscrew the torx screw on the underside of the trusshooks. Adjust the desired height and tighten the torx screws again. Attention! The tightening moment of the screw connection is a minimum of 6 Nm.

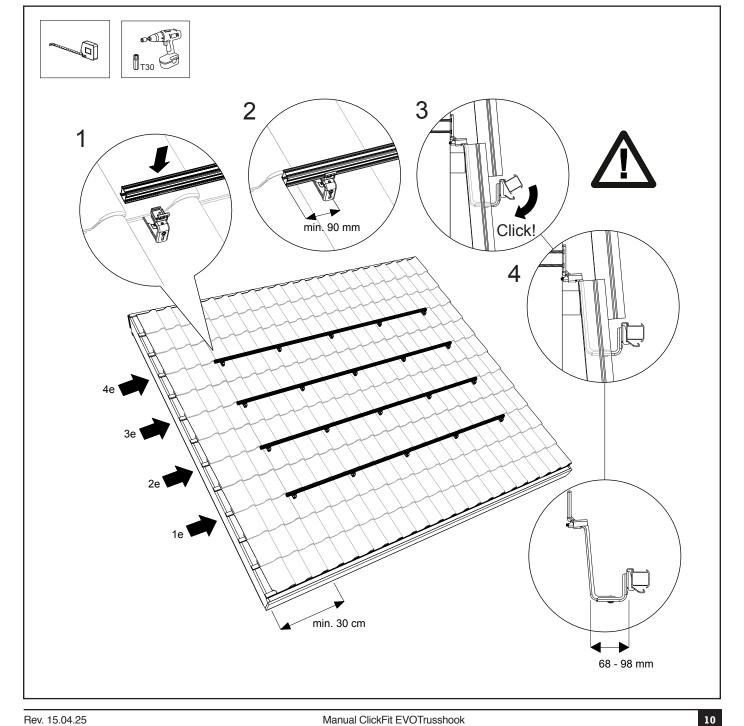

6.4 Mounting Clickfit EVO MLPE clip Light or Heavy Weight (option)

Mounting Clickfit EVO MLPE clip Light Weight

- 1. Position the clip on the top mounting rail of a row. The clips are under the middle of the panel. Place the cable clips approximately 1m from each other.
- 2. Click the clip firmly onto the mounting rails.
- 3. Slide the MLPE device onto the Light Weight clip until it is secured.


Optional:

- 4. Guide the cabling through the click bracket of the trusshook and the clip.
- 5. Guide the MLPE device cables through the Light Weight clip.

Mounting Clickfit EVO MLPE clip Heavy Weight (for MLPE devices exceeding 2kg)

- 1. Slide the Heavy Weight clip onto the MLPE device.
- 2. Fasten the clip with the bolt to the MLPE device. Tighten the bolt properly. **Attention!** The tightening moment of the bolt connection is 8-12 Nm.
- 3. Fasten the Heavy Weight clip with the MLPE device to the rail.

Note: For larger MLPE devices (equipped with 2 slots), it is essential to use two Heavy Weight clips.

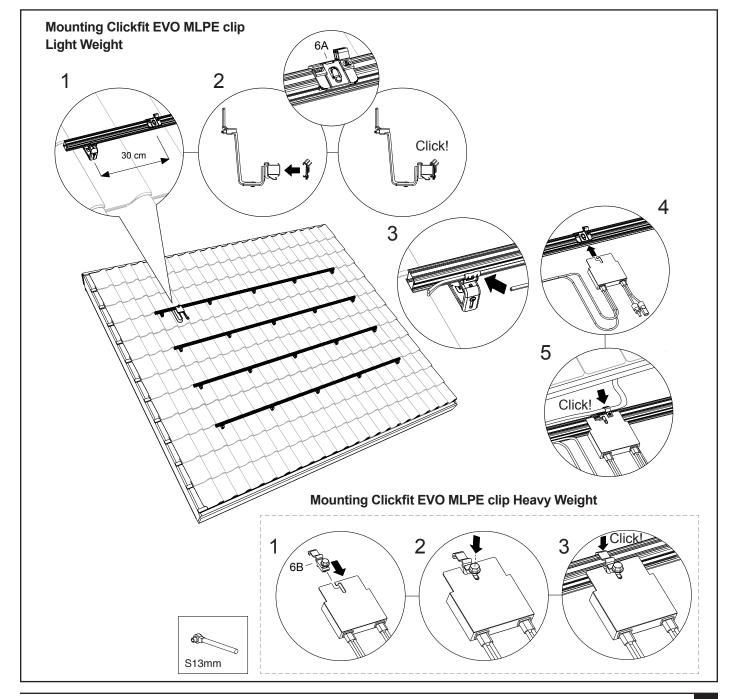

6.5 Mounting 1st solar panel on the mounting rails

Mounting aid (Option):


Click the mounting aid (2x) onto the frame on the back of the solar panel. Use the mounting holes at the top of the frame for this. Click the cables of the solar panel securely into the cable clamp on the mounting aid.

Hang the solar panel, including the mounting aid, on the mounting rail. Click the cables of the solar panel into the MLPE clip that has already been placed. Slide the first solar panel to the side of the mounting rail. Leave 20 - 35 mm of rail protruding visibly beside the solar panel.

Now slide the mounting rail end cap with universal module (end) clamp onto the mounting rail. Choose the correct recess so that the universal module (end) clip connects to the solar panel. Now tighten the universal module (end) clamp.

Attention! The tightening moment of the screw connection is 4.5 Nm.

Attention! The minimum panel thickness Y = 30 mm and the maximum panel thickness X = 50 mm.

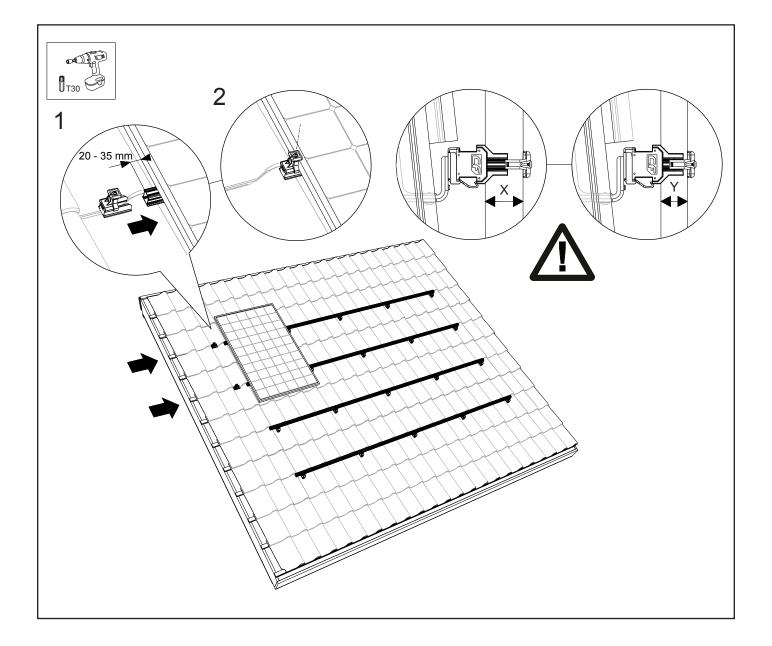

6.6 Mounting other solar panels on the mounting rails


Click the universal module clamps onto the mounting rails. Slide them against the first solar panel. Place the second solar panel on the mounting rail, click the cables of the solar panel securely into the MLPE clip and slide the solar panel to the first against the universal module clamp. Now tighten the universal module clamp screw.

Attention! To obtain a continuous panel surface, the solar panels must be placed right next to each other. Care must be taken to ensure that a gap of 12mm is maintained.

Always follow the project plan that comes out of the calculator, and the module manufacturer's installation manual.


Attention! The tightening moment of the screw connection is 4.5 Nm.

Ensure that the solar panels are lying completely straight before you tighten the torx screw! Repeat this with the remaining solar panels.

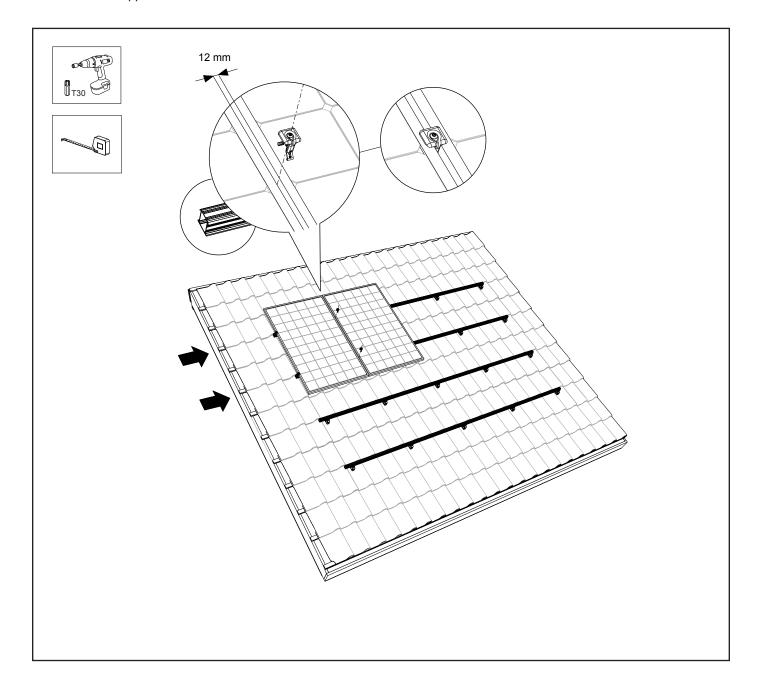


6.7 Completing the mounting of the 1st row of solar panels

- 1. Allow the mounting rail to protrude 20 35 mm from the edge of the solar panel. Slide the mounting rail end cap with universal module (end) clip onto the mounting rail. Attention! Choose the correct recess so that the end clip connects to the solar panel.
- 2. Now screw the end clip tight with the torx screw. **Attention!** The tightening moment of the screw connection is 4.5 Nm.

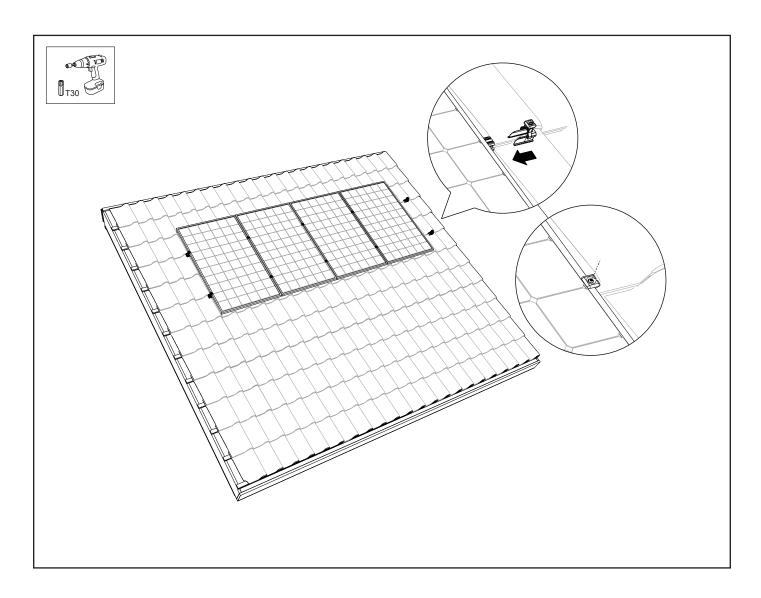

6.8 Completing the mounting of several rows under each other

- 1. To obtain an uninterrupted field of panels you slide the underlying solar panels against the row of solar panels above them. Care must also be taken here to ensure that a gap of 12mm is maintained. Always follow the project plan that comes out of the calculator and the module manufacturer's installation manual.
- 2. Repeat the steps of chapter 6.5 6.7. The field of panels is now finished!

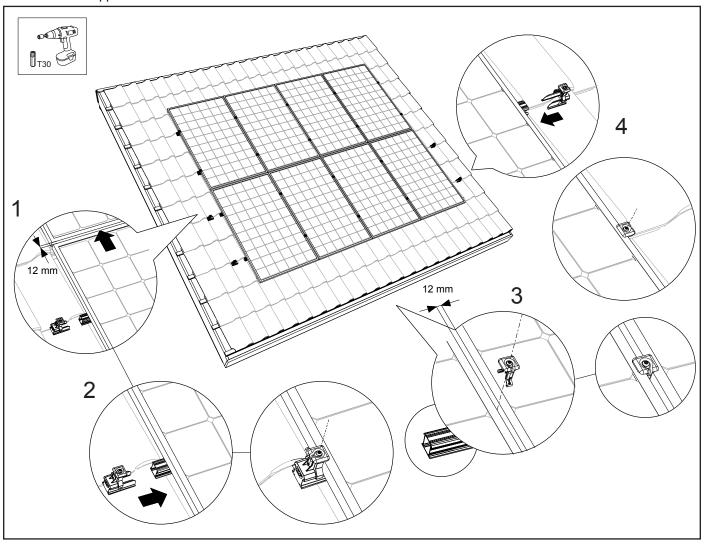


7. Installation of mounting system in landscape layout

7.1 Pre-mounting the mounting rail connector

First determine the total rail length required for the solar panels under each other.

You can connect the mounting rails to each other with mounting rail connectors. The mounting rail connector has small clamps with teeth that grip the inside of the rail.

Slide the connector into the ends of the mounting rail. Slide the connector to the centre of the middle stud of the connector. Connect the number of rails together until the total rail length required is reached.

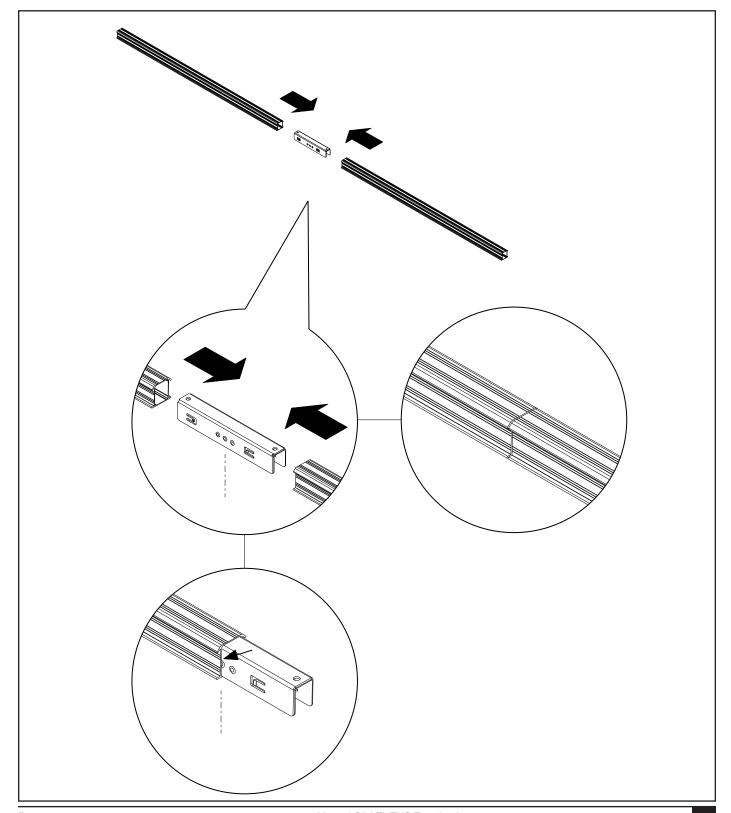

7.2 Fastening trusshooks

fastened to the trusshook horizontally (see chapter 4.3).

- 1. Slide the tile above the trusshook upwards, under the tile above it. Place the mounting flange of the trusshook on the roof batten, ensure that it connects correctly and pull the trusshook against the tile. Place the trusshook in the concave section (dip) of the underlying tile. The top adjustable part of the trusshook is a minimum of 37 mm and a maximum of 62 mm.
- 2. Fasten the trusshook with a minimum of 2 teller head screws 6x50/60 to the roof batten. **Attention!** These screws are not supplied.
- 3. Tighten the torx screw at the top of the trusshook firmly with a cordless screw driver. **Attention!** The tightening moment of the screw connection is 1 1.5 Nm.
- 4. Slide the tile above the trusshook down again. Some tiles must be adapted to the trusshook with an angle grinder or file so that the tiles close correctly again. *
- 5. Follow the instructions of the calculator with regard to the gaps between each trusshook. They are an important guide. The maximum lateral gap is 1.20 m. divide the number of trusshooks produced by the calculation over the possible roof battens, with a maximum span of 1.20m. Ensure that the trusshooks are aligned with each other.
- **Attention! When needed, rail spacing can be extended to the previous or next tile, crest or seam, up to 400 mm beyond the recommended distance. Enstall recommends to always respect the module manufacturers' rail spacing and clamping specifications.

*Option: For tiles with a high water retaining edge, the filling rubber can be placed under the trusshook so that the trusshook rests neatly on the tile. Fold the rubber to create the desired thickness. The filling steps are 5,10 and 15 mm.

Attention! Ensure that the click bracket on every trusshook is in the correct position so that the mounting rail can be


T30 3 4 1 37-62 mm 2/4B*** 2/4B*** 30-60 cm 2/4B** 2/4B OPTION 1/4B 2/4B** 1/4B

7.3 Fastening the mounting rail

- 1. Place the mounting rail in the installed trusshooks.
- 2. Ensure that the end of the mounting rails protrudes 90 350 mm from the last trusshook.
- 3. Now click the mounting rail onto the trusshooks. Ensure that it is firmly clicked into place.
- 4. Ensure that the mounting rail and the trusshooks are correctly aligned with each other and that the mounting rail is positioned correctly on the trusshook. Ensure that the mounting rails are horizontally aligned with each other in connection with the alignment of the solar panels!

The mounting rails can be aligned by means of the height adjustment on the trusshook where necessary. Unscrew the torx screw on the underside of the trusshooks slightly. Set the desired height and retighten the torx screws. Attention! The tightening moment of the screw connection is a minimum of 6 Nm.

5. Secure the mounting rails with a self-drilling screw 6.3x42mm SW10/T30 to the bottom trusshook to prevent the rails from sliding down. Attention! Place this locking screw every three solar panels (above each other) and always start at the bottom trusshook.

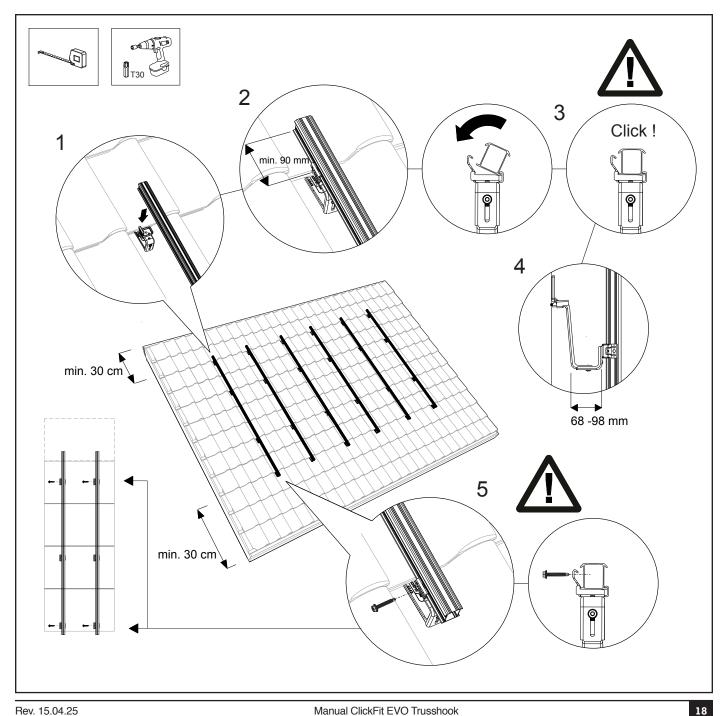

7.4 Mounting Clickfit EVO MLPE clip Light or Heavy Weight (option)

Mounting Clickfit EVO MLPE clip Light Weight

- 1. Position the clip on the mounting rail of a row. The clips are positioned underneath the centre of the panel. Place the clips approximately 1 metre from each other.
- 2. Click the clip firmly onto the mounting rails.
- 3. Slide the MLPE device onto the Light Weight clip until it is secured.


Optional:

- 4. Guide the cabling through the click bracket of the trusshook and the clip.
- 5. Guide the MLPE device cables through the Light Weight clip.

Mounting Clickfit EVO MLPE clip Heavy Weight (for MLPE devices exceeding 2kg)

- 1. Slide the Heavy Weight clip onto the MLPE device.
- 2. Fasten the clip with the bolt to the MLPE device. Tighten the bolt properly. **Attention!** The tightening moment of the bolt connection is 8-12 Nm.
- 3. Fasten the Heavy Weight clip with the MLPE device to the rail.

Note: For larger MLPE devices (equipped with 2 slots), it is essential to use two Heavy Weight clips.

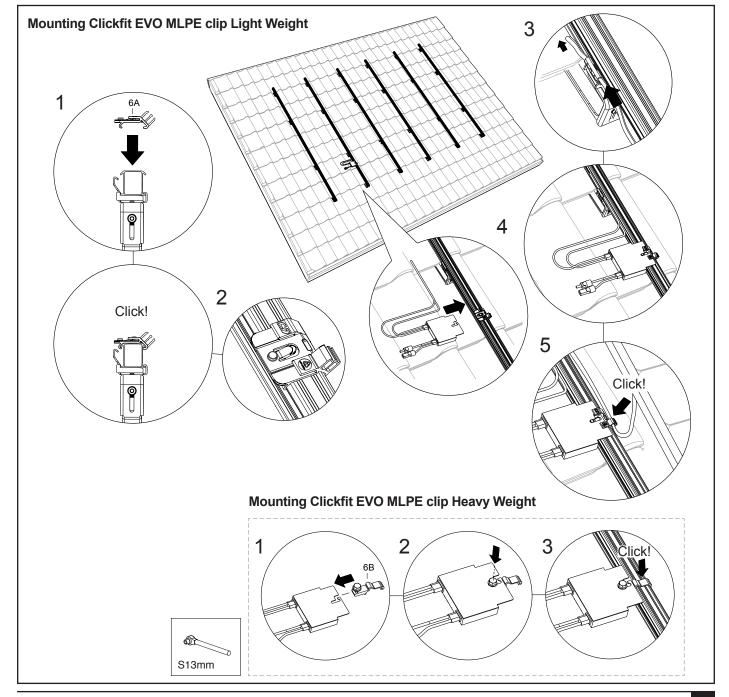


7.5 Mounting the 1st solar panel on a mounting rails

Hang the solar panel on the mounting rail. Click the cables of the solar panel into the MLPE clip that has been installed. Slide the first solar panel to the bottom of the mounting rail. Leave 20 - 35 mm of the rail protruding visibly under the solar panel.

Now slide the mounting rail end cap with universal module (end) clip onto the mounting rail. Choose the correct recess so that the universal module clamp connects with the solar panel. Now tighten the universal module (end) clip. **Attention!** The tightening moment of the screw connection is 4.5 Nm.

Attention! The minimum panel thickness Y = 30 mm and the maximum panel thickness X = 50 mm. **Attention!** See appendix for restrictions and other details.

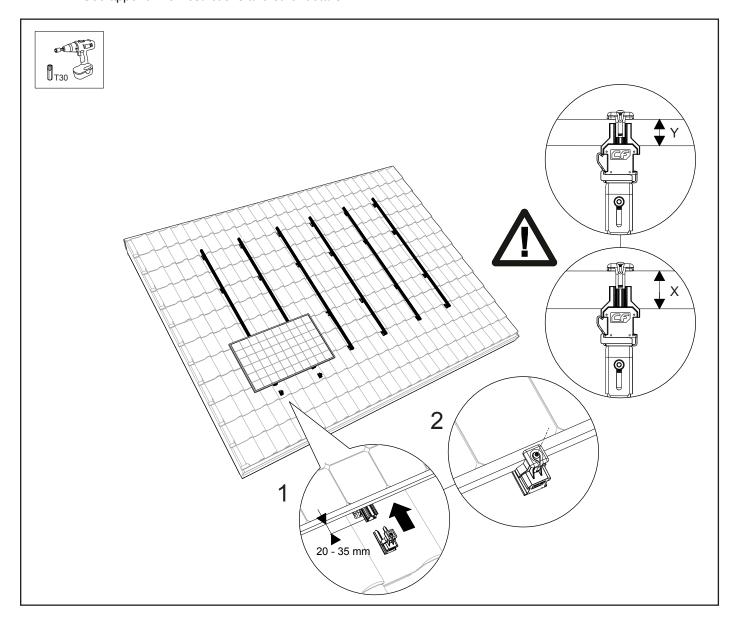

7.6 Mounting other solar panels on the rails


Click the universal module clamps onto the mounting rails. Slide them against the first solar panel. Place the second solar panel on the mounting rail, click the cables of the solar panel securely into the MLPE clip and slide the solar panel to the first against the universal module clamp. Now screw the universal module clamp tight.

Attention! To obtain a continuous panel surface, the solar panels must be placed right next to each other. Care must be taken to ensure that a gap of 12mm is maintained.

Always follow the project plan that comes out of the calculator, and the module manufacturer's installation manual.


Attention! The tightening moment of the screw connection is 4.5 Nm.

Ensure that the solar panels are lying straight before you tighten the torx screw! Repeat this with the remaining solar panels.

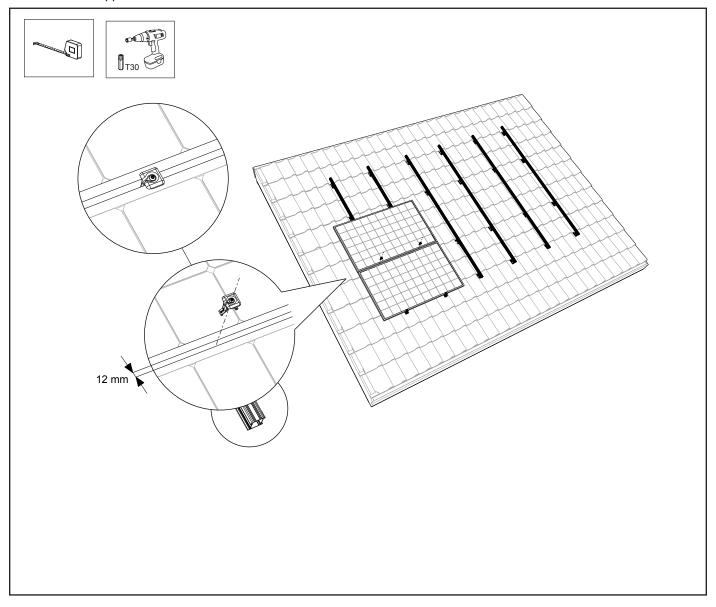


7.7 Completing the mounting of the 1st row of solar panels above each other

- 1. Allow the mounting rail to protrude 20 35 mm from the edge of the solar panel. Slide the mounting rail end cap with universal module (end) clip onto the mounting rail. **Attention!** Choose the correct recess so that the end clip connects with the solar panel.
- 2. Now screw the end clip firmly into position with the torx screw. **Attention!** The tightening moment of the screw connection is 4.5 Nm.

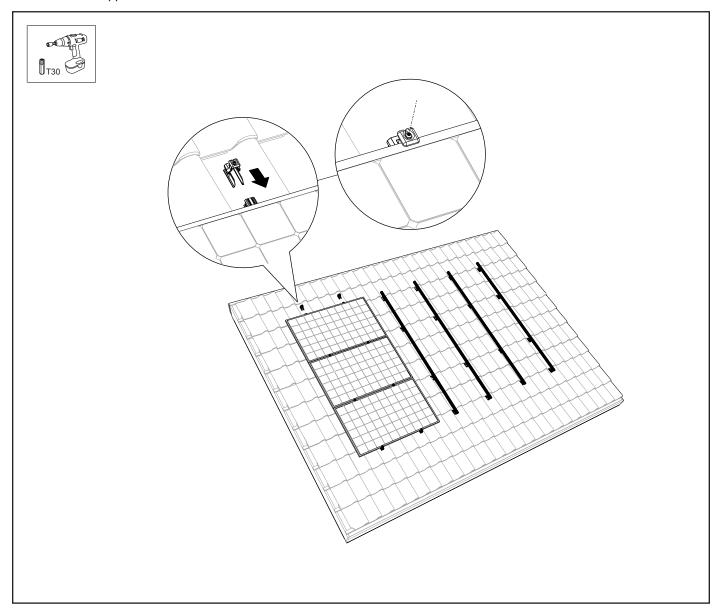

7.8 Completing the mounting of several rows next to each other

- 1. To obtain an uninterrupted field of solar panels you slide the adjacent solar panels against the row of solar panels. Care must also be taken here to ensure that a gap of 12mm is maintained. Always follow the project plan that comes out of the calculator and the module manufacturer's installation manual.
- 2. Repeat the steps of chapter 7.5 7.7. The panel field is now finished!

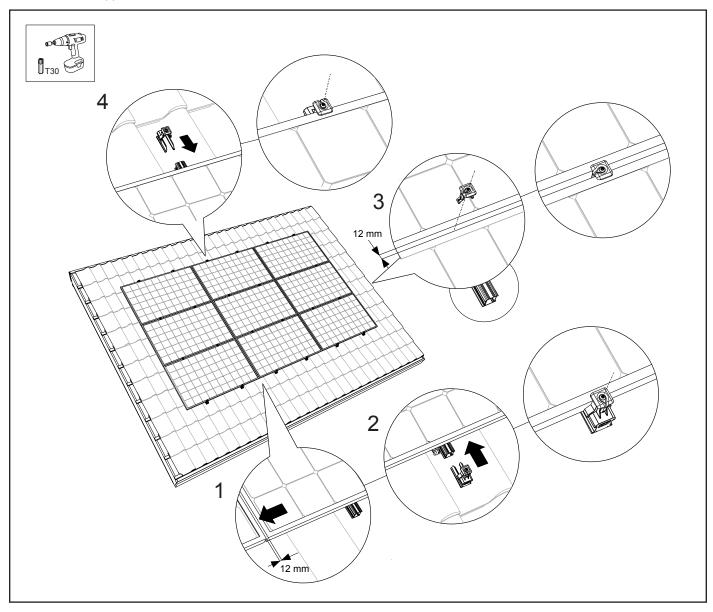


8. Appendix 1 - Clickfit EVO Standard

8.1 Specifications for installation


8.1 - 01

Slide the connector into the ends of the mounting rails. Slide the connector to the centre of the middle stud of the connector. This ensures that the connector is divided equally over the 2 rail ends.

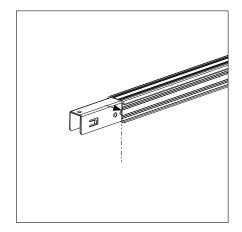


8.1 - 02

The first trusshook must be fitted a minimum of 90 mm from the end of the mounting rail. And a maximum of 350 mm.

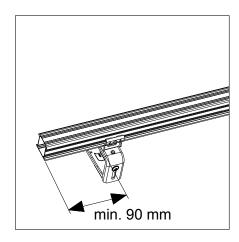


8.1 - 03

The mounting rails must protrude 20 - 35 mm from the edge of the solar panel.

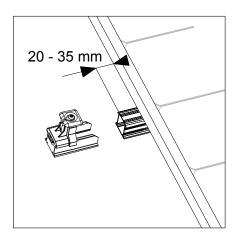


8.1 - 04

The mounting rails must protrude 20 - 35 mm from the edge of the solar panel. Saw the mounting rails to the correct length.

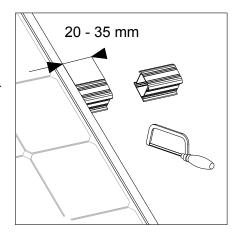


8.1 - 05

The trusshook must be mounted a minimum of 90 mm from the end of the mounting rail. And a maximum of 350 mm.

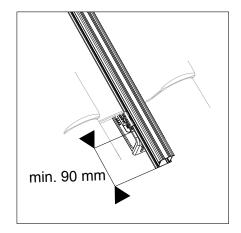

8.1 - 06

The mounting rails must protrude 20 - 35 mm from the edge of the solar panel.

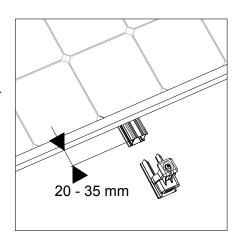

8.2 Tightening moments

Screws for fastening trusshooks to battens (minimum of 2 screws per trusshook):

Screws for fastening trusshooks (= screw on the top of the trusshook):

Screws for height adjustment of trusshooks (= screw on the underside of the trusshook):

1 – 1,5 Nm minimum 6,0 Nm

Screws for fastening module clamps:

4,5 Nm


Bolt for fastening the Heavy Weight clip onto the MLPE device (= bolt on MLPE clip Heavy Weight)

8-12 Nm


9. Appendix 2 - Clickfit EVO 60 mm Clamp

9.1 Parts overview

9.1.1 Exploded-view mounting system in portrait set-up (60 mm Clamp)

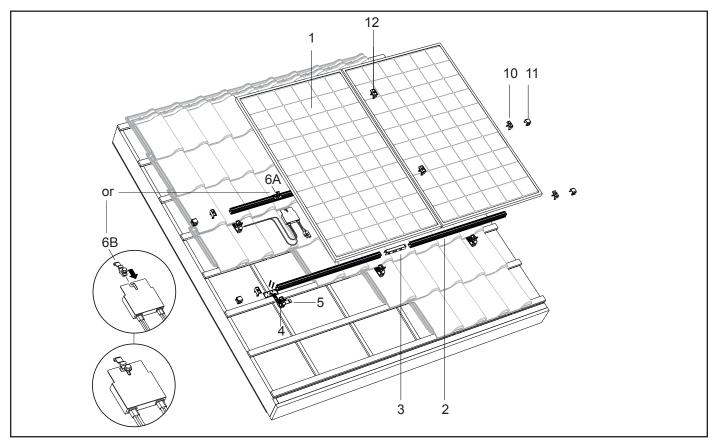

9.1.2 Exploded-view mounting system in landscape set-up (60 mm Clamp)

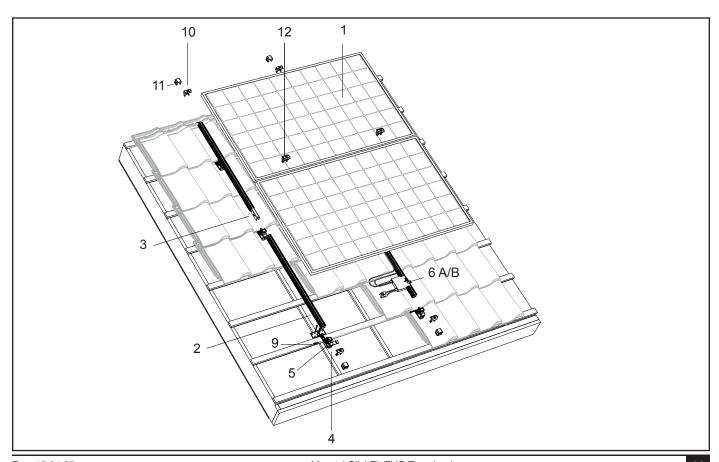

9.1.3 Parts list



10. ClickFit EVO 60 End Clamp Black Article no: 1008022-B



11. Clickfit EVO End Cap Black Article no: 1008066-B




12. Clickfit EVO 60 Mid Clamp Black Article no: 1008021-B

9.1.4 Specifications for installation


9.1.4 - 01

The mounting rails must protrude 50 - 70 mm from the edge of the solar panel to allow the mounting of the End cap on the mounting rails. Saw the mounting rails off at the correct length.

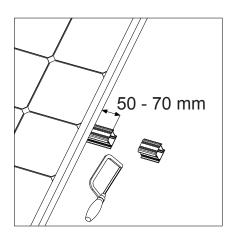

9.1.4 - 02

The mounting rails must protrude 50 - 70 mm from the edge of the solar panel to allow the mounting of the End cap on the mounting rails.

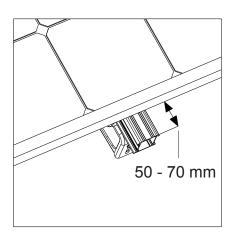

9.1.5 Tightening moment


Screws for fastening the 60 mm End Clamp and Mid Clamp: 16,5 Nm

9.2. Mounting of solar panels in the portrait set-up with 60 mm Clamp

9.2.1 Mounting the End caps on the mounting rails


Attention! First follow the steps of chapters 6.1 to 6.4 before mounting the 2 End caps on the mounting rails.

- 1. Slide the 1st End cap onto the end of the upper mounting rail.
- 2. Then slide the 2nd End cap onto the end of the mounting rail below.

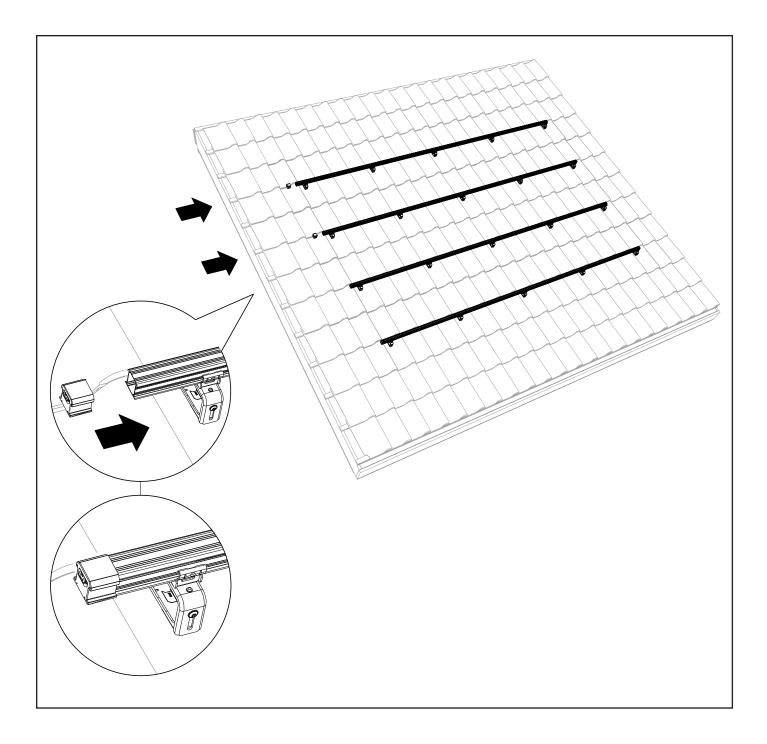

9.2.2 Mounting the 60 mm End Clamps on the mounting rails

1. Click the 60 mm End Clamps on the mounting rails. **Attention!** Ensure the 60mm End Clamps are against the End caps.

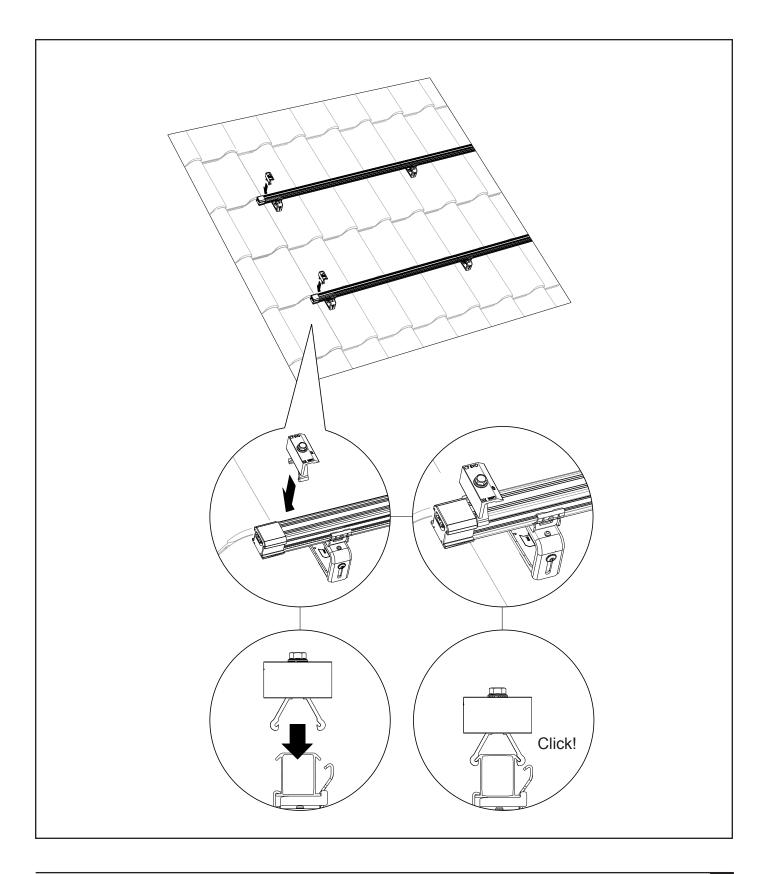


9.2.3 Positioning and mounting 1st solar panel

Attention! If you use the optional mounting aid, follow the steps in chapter 6.5.

- 1. Place the first solar panel on the mounting rails and click the solar panel cables into the MLPE clip.
- 2. Slide the solar panel against the 60 mm End Clamps.


Attention! Make sure the solar panel is completely straight before tightening the screws!

3. Then tighten the screws of the 60 mm End Clamps. Attention! The tightening moment of the screw connection is 16,5Nm.

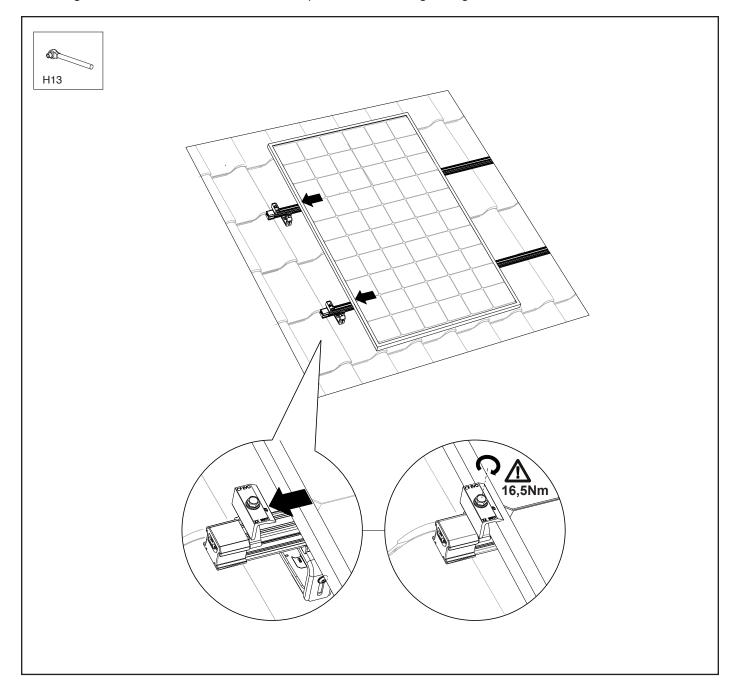

9.2.4 Click the 60 mm Mid Clamps onto the mounting rails

- 1. Click the 60 mm Mid Clamps onto the mounting rails just next to the first solar panel.
- 2. Slide the 60 mm Mid Clamps against the first solar panel.

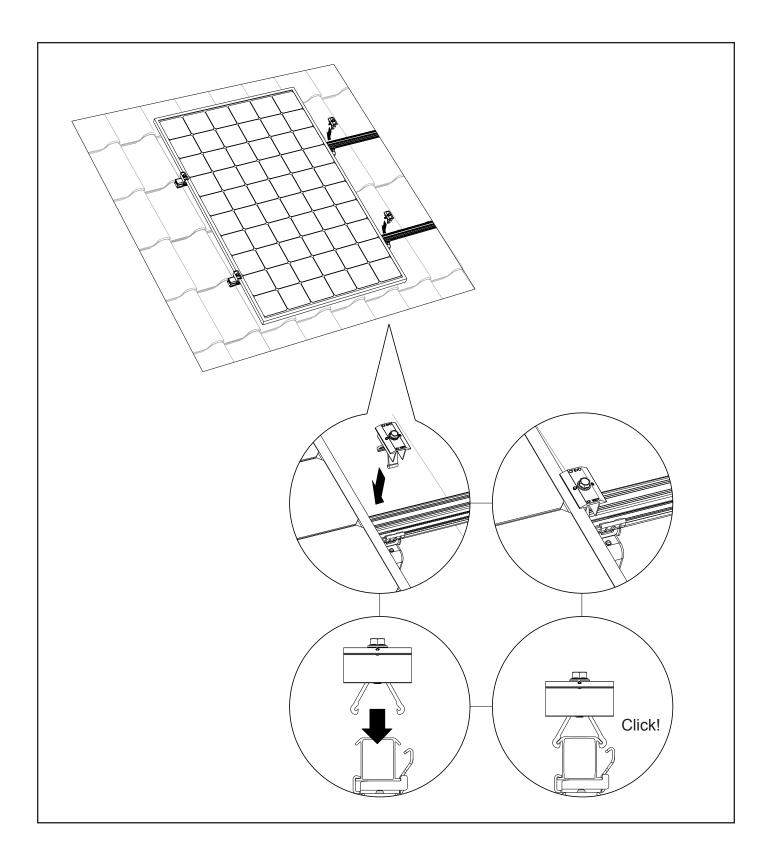


9.2.5 Positioning and mounting 2nd solar panel

- 1. Place the second solar panel on the mounting rails.
- 2. Click the solar panel cables into the MLPE clip.
- 3. Slide the second solar panel towards the first against the 60 mm Mid Clamps. Care must be taken to ensure that a gap of 20mm is maintained.

Attention! Make sure that the solar panels are completely straight and aligned before tightening the screws!

4. Then tighten the screws of the 60 mm Mid Clamps. **Attention!** The tightening moment of the screw connection is 16,5Nm. Repeat this with the remaining solar panels.

Attention! Always follow the project plan that comes out of the calculator, and the module manufacturer's installation manual.

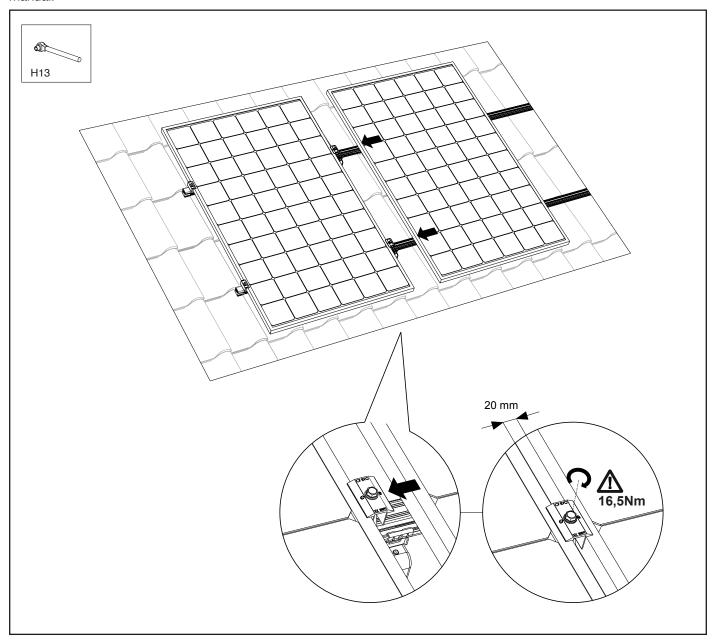


9.2.6 Mounting the last solar panel

Optional: Saw the mounting rails to size.

- If the solar panel has less than 350 mm overlap with the last roof hook, allow 50 to 70 mm of mounting rail to protrude for mounting the End cap (art. no. 1008066-B).
- If the solar panel has more than 350 mm overlap with the last roof hook, extend the mounting rail so that it protrudes 40 mm from the next roof hook, and attach the mounting rail here. The extra 40 mm provides sufficient length to place the End cap (art. no. 1008066-B) on the mounting rails.
- 1. Place the last solar panel on the mounting rails.
- 2. Click the solar panel cables into the MLPE clip.
- 3. Slide the last solar panel against the 60 mm Mid Clamps. Care must be taken to ensure that a gap of 20mm is maintained.


Attention! Make sure that the solar panels are completely straight and aligned before tightening the screws!

4. Then tighten the screws of the 60 mm Mid Clamps. Attention! The tightening moment of the screw connection is 16,5Nm.

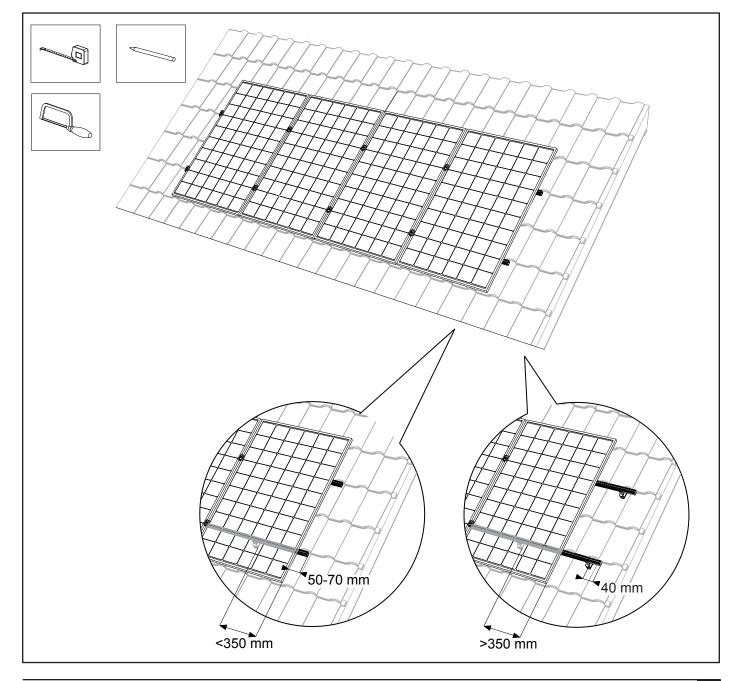


9.2.7 Click the 60 mm End Clamp onto the mounting rails

- 1. Click the 60 mm End Clamps onto the mounting rails
- 2. Slide the 60 mm End Clamps against the last solar panel.
- 3. Then tighten the screws of the 60 mm End Clamps. Attention! The tightening moment of the screw connection is 16,5Nm.

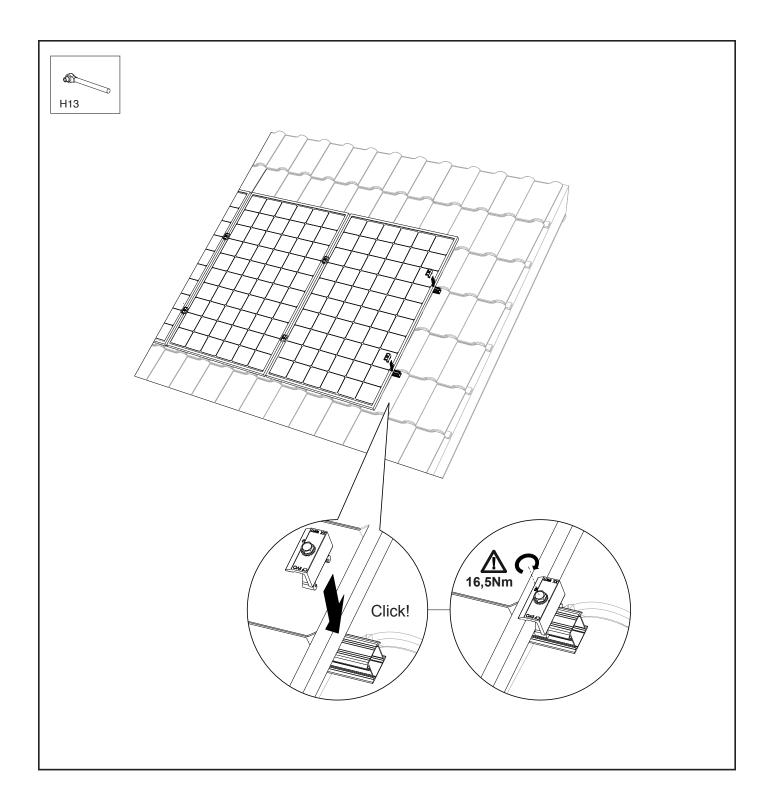


9.2.8 Mounting the End caps on the mounting rails

- 1. Slide the 1st End cap onto the end of the upper mounting rail.
- 2. Then slide the 2nd End cap onto the end of the mounting rail below.

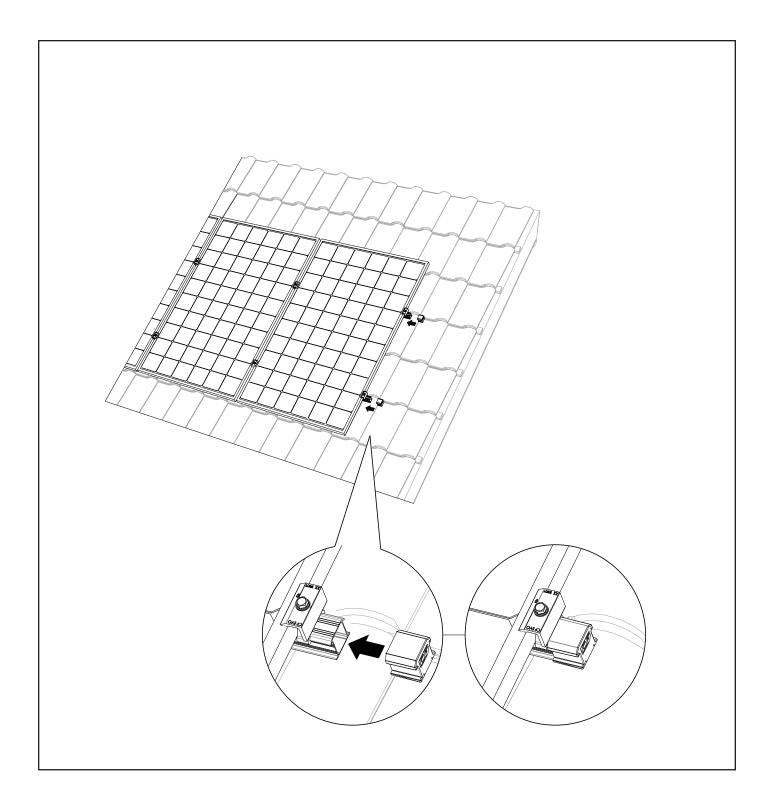

9.2.9 Completion of mounting/several rows below each other

- 1. In order to obtain a continuously connected panel area you slide the bottom solar panels against the top row of solar panels. Care must also be taken here to ensure that a gap of 12mm is maintained. Always follow the project plan that comes out of the calculator and the module manufacturer's installation manual.
- 2. Repeat the steps of chapter 9.2.1 9.2.8 The panel field is now complete!

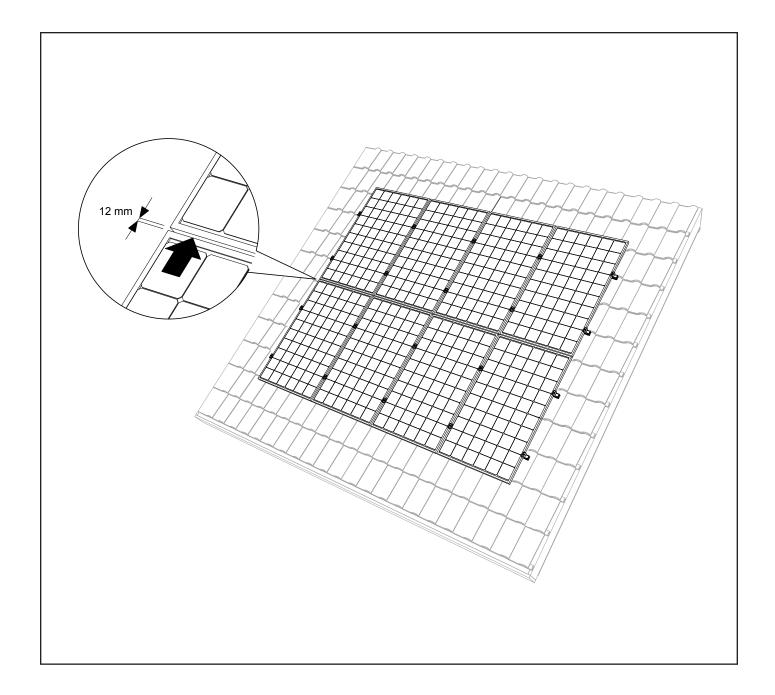


9.3 Mounting of solar panels in the landscape set-up with 60 mm Clamp

9.3.1 Mounting the End caps on the mounting rails


Attention! First follow the steps of chapters 7.1 to 7.4 before mounting the 2 End caps on the mounting rails.

- 1. Slide the 1st End cap onto the end of the 1st mounting rail.
- 2. Then slide the 2nd End cap onto the end of the 2nd mounting rail.

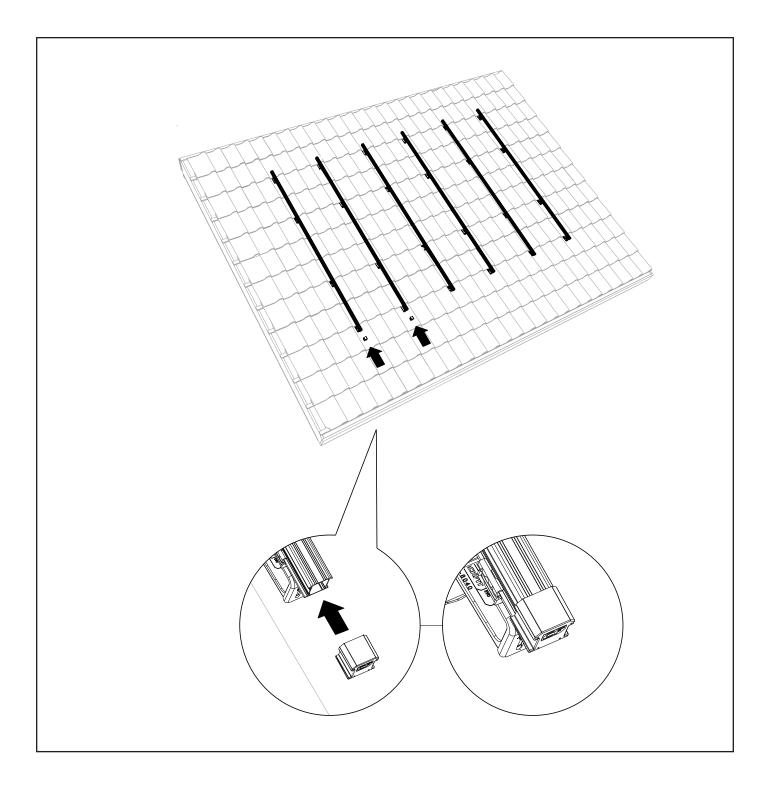

9.3.2 Mounting the 60 mm End Clamps on the mounting rails

1. Click the 60 mm End Clamps on the mounting rails. **Attention!** Ensure the 60mm End Clamps are against the End caps.

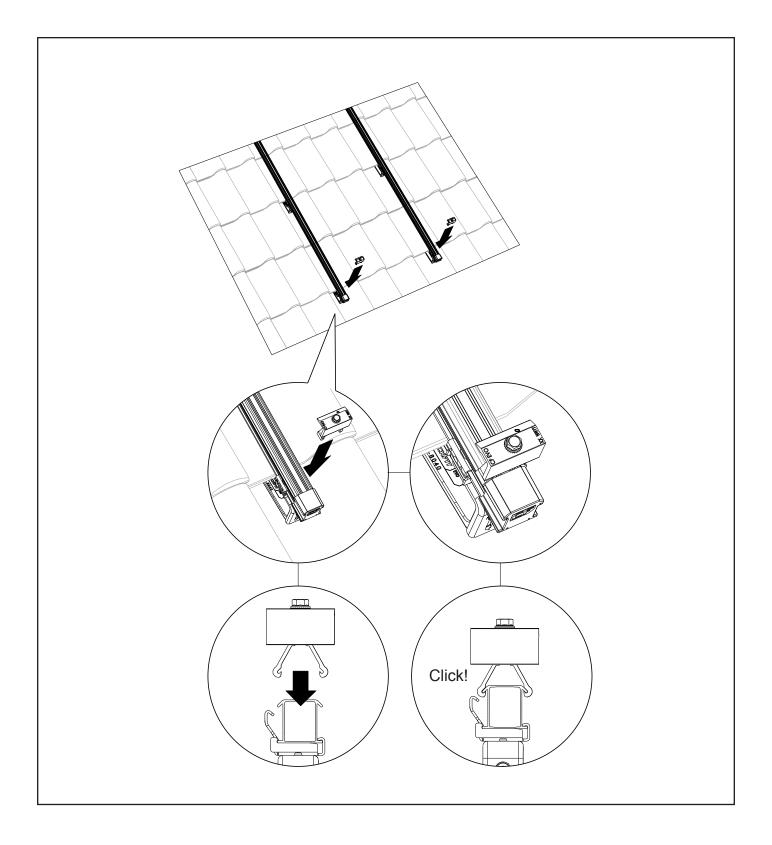


9.3.3 Positioning and mounting 1st solar panel

- 1. Place the first solar panel on the mounting rails and click the solar panel cables into the MLPE clip.
- 2. Slide the solar panel to the end of the mounting rail against the 60 mm End Clamps.


Attention! Make sure the solar panel is completely straight before tightening the screws!

3. Then tighten the screws of the 60 mm End Clamps. Attention! The tightening moment of the screw connection is 16,5Nm.

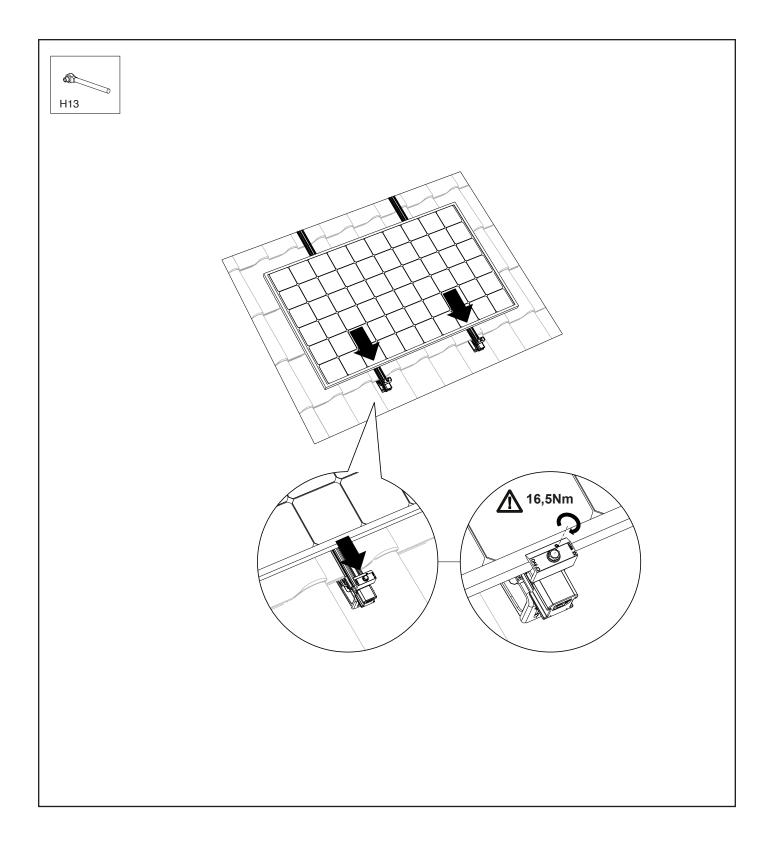

9.3.4 Click the 60 mm Mid Clamps onto the mounting rails

- 1. Click the 60 mm Mid Clamps onto the mounting rails just above the first solar panel.
- 2. Slide the 60 mm Mid Clamps against the first solar panel.

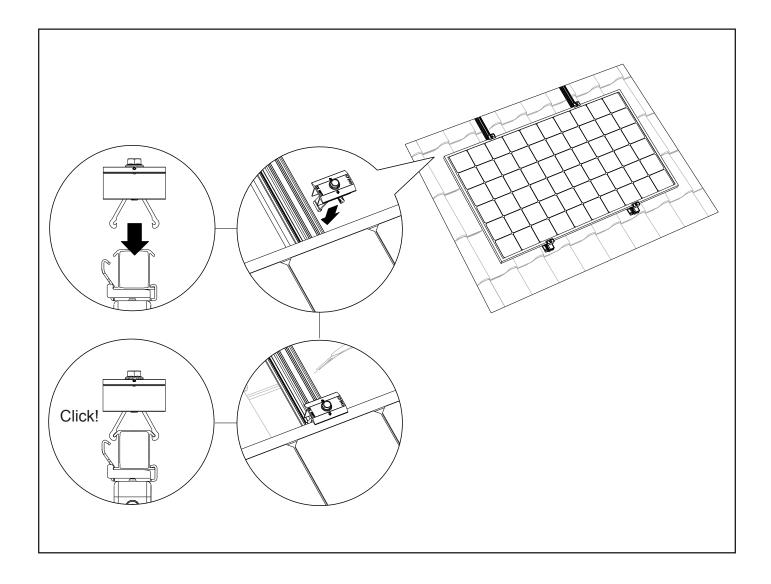

40


9.3.5 Positioning and mounting 2nd solar panel

- 1. Place the second solar panel on the mounting rails.
- 2. Click the solar panel cables into the MLPE clip.
- 3. Slide the second solar panel towards the first against the 60 mm Mid Clamps. Care must be taken to ensure that a gap of 20mm is maintained.

Attention! Make sure that the solar panels are completely straight and aligned before tightening the screws!

4. Then tighten the screws of the 60 mm Mid Clamps. **Attention!** The tightening moment of the screw connection is 16,5Nm. Repeat this with the remaining solar panels.


Attention! Always follow the project plan that comes out of the calculator, and the module manufacturer's installation manual.

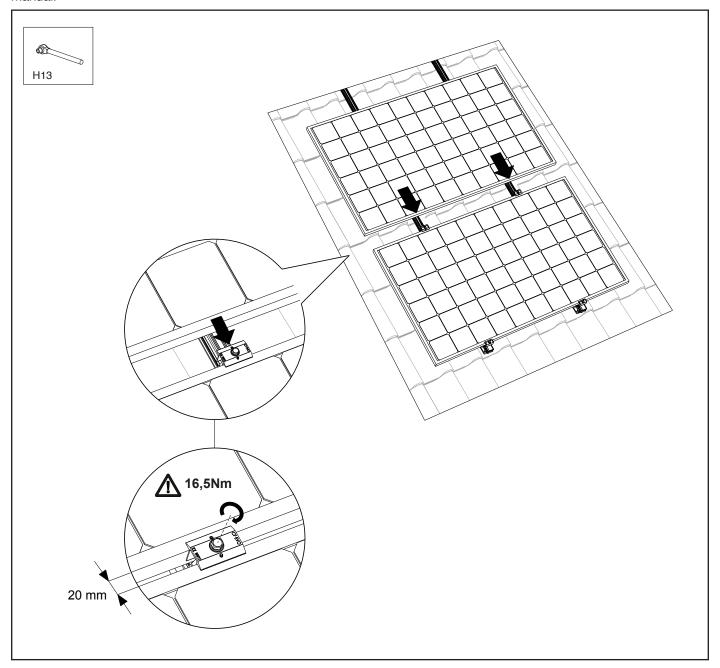

9.3.6 Mounting the last solar panel

Attention! The mounting rails must protrude 50 - 70 mm above the last solar panel to allow the mounting of the End cap (art. no. 1008066-B) on the mounting rails.

- 1. Place the last solar panel on the mounting rails.
- 2. Click the solar panel cables into the MLPE clip.
- 3. Slide the last solar panel against the 60 mm Mid Clamps. Care must be taken to ensure that a gap of 20mm is maintained. **Attention!** Make sure that the solar panels are completely straight and aligned before tightening the screws!
- 4. Then tighten the screws of the 60 mm Mid Clamps. Attention! The tightening moment of the screw connection is 16,5Nm.
- 5. Click the 60 mm End Clamps onto the mounting rails.
- 6. Slide the 60 mm End Clamps against the last solar panel.
- 7. Then tighten the screws of the 60 mm End Clamps. Attention! The tightening moment of the screw connection is 16,5Nm.
- 8. Slide the End caps onto the ends of the mounting rails.

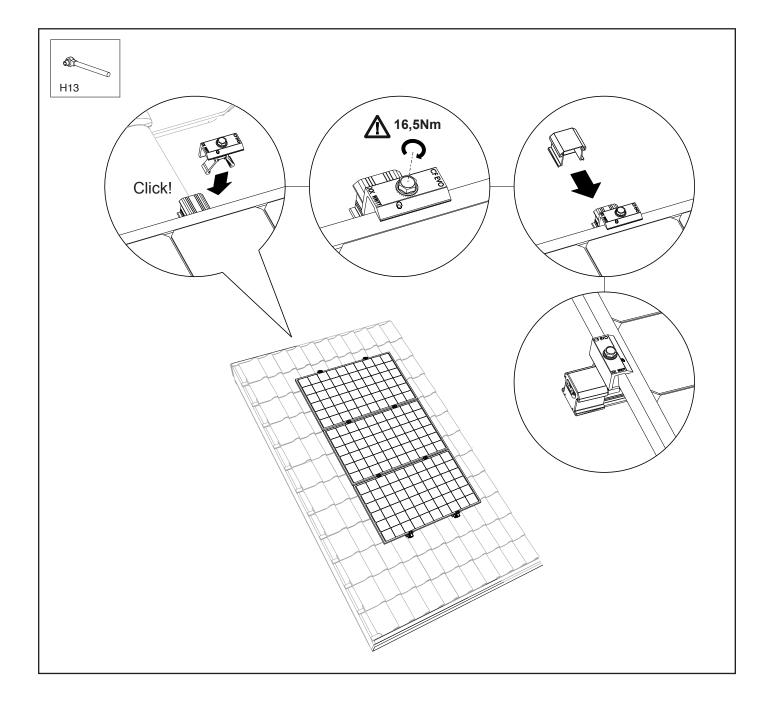

9.3.7 Completion of installation / several rows alongside each other

- 1. In order to obtain an uninterrupted solar panel field you slide the adjacent solar panels against the row of solar panels. Care must also be taken here to ensure that a gap of 12mm is maintained. Always follow the project plan that comes out of the calculator and the module manufacturer's installation manual.
- 2. Repeat the steps of chapter 9.3.1 9.3.6. The panel field is now complete!

